

PART#76-1061B



TOOLS NEEDED

- 15mm SOCKET
- 18mm SOCKET
- 3/4" SOCKET
- 3/4" COMBINATION WRENCH
- TORQUE WRENCH
- RATCHET

QTY	DESCRIPTION
2	STAINLESS STEP BARS (1 DRIVER SIDE ; 1 PASSENGER SIDE)
4	STAINLESS MOUNTING BRACKETS
4	STAINLESS 1/2"-13 UNC*2" L HEX HEAD BOLTS
4	STAINLESS 1/2" LOCK WASHERS
4	STAINLESS 1/2" FLAT WASHERS

STEPS	INSTALLATION
1	CHECK CONTENTS OF BOX FOR DAMAGE OR MISSING ITEMS
2	BOLT MOUNTING BRACKET TO STEP BARS WITH 1/2" HEX BOLTS
3	REMOVE BODY MOUNT BOLTS ; MOUNT BRACKET TO BODY MOUNT WITH FACTORY CAB BOLT FOR INSTALLATION.
4	CHECK THAT THE STEP BAR IS ALLIGNED WITH VEHICLE
5	TIGHTEN AND TORQUE ALL MOUNTING BRACKET BOLTS TO 55 FT LBS.

DRIVER SIDE

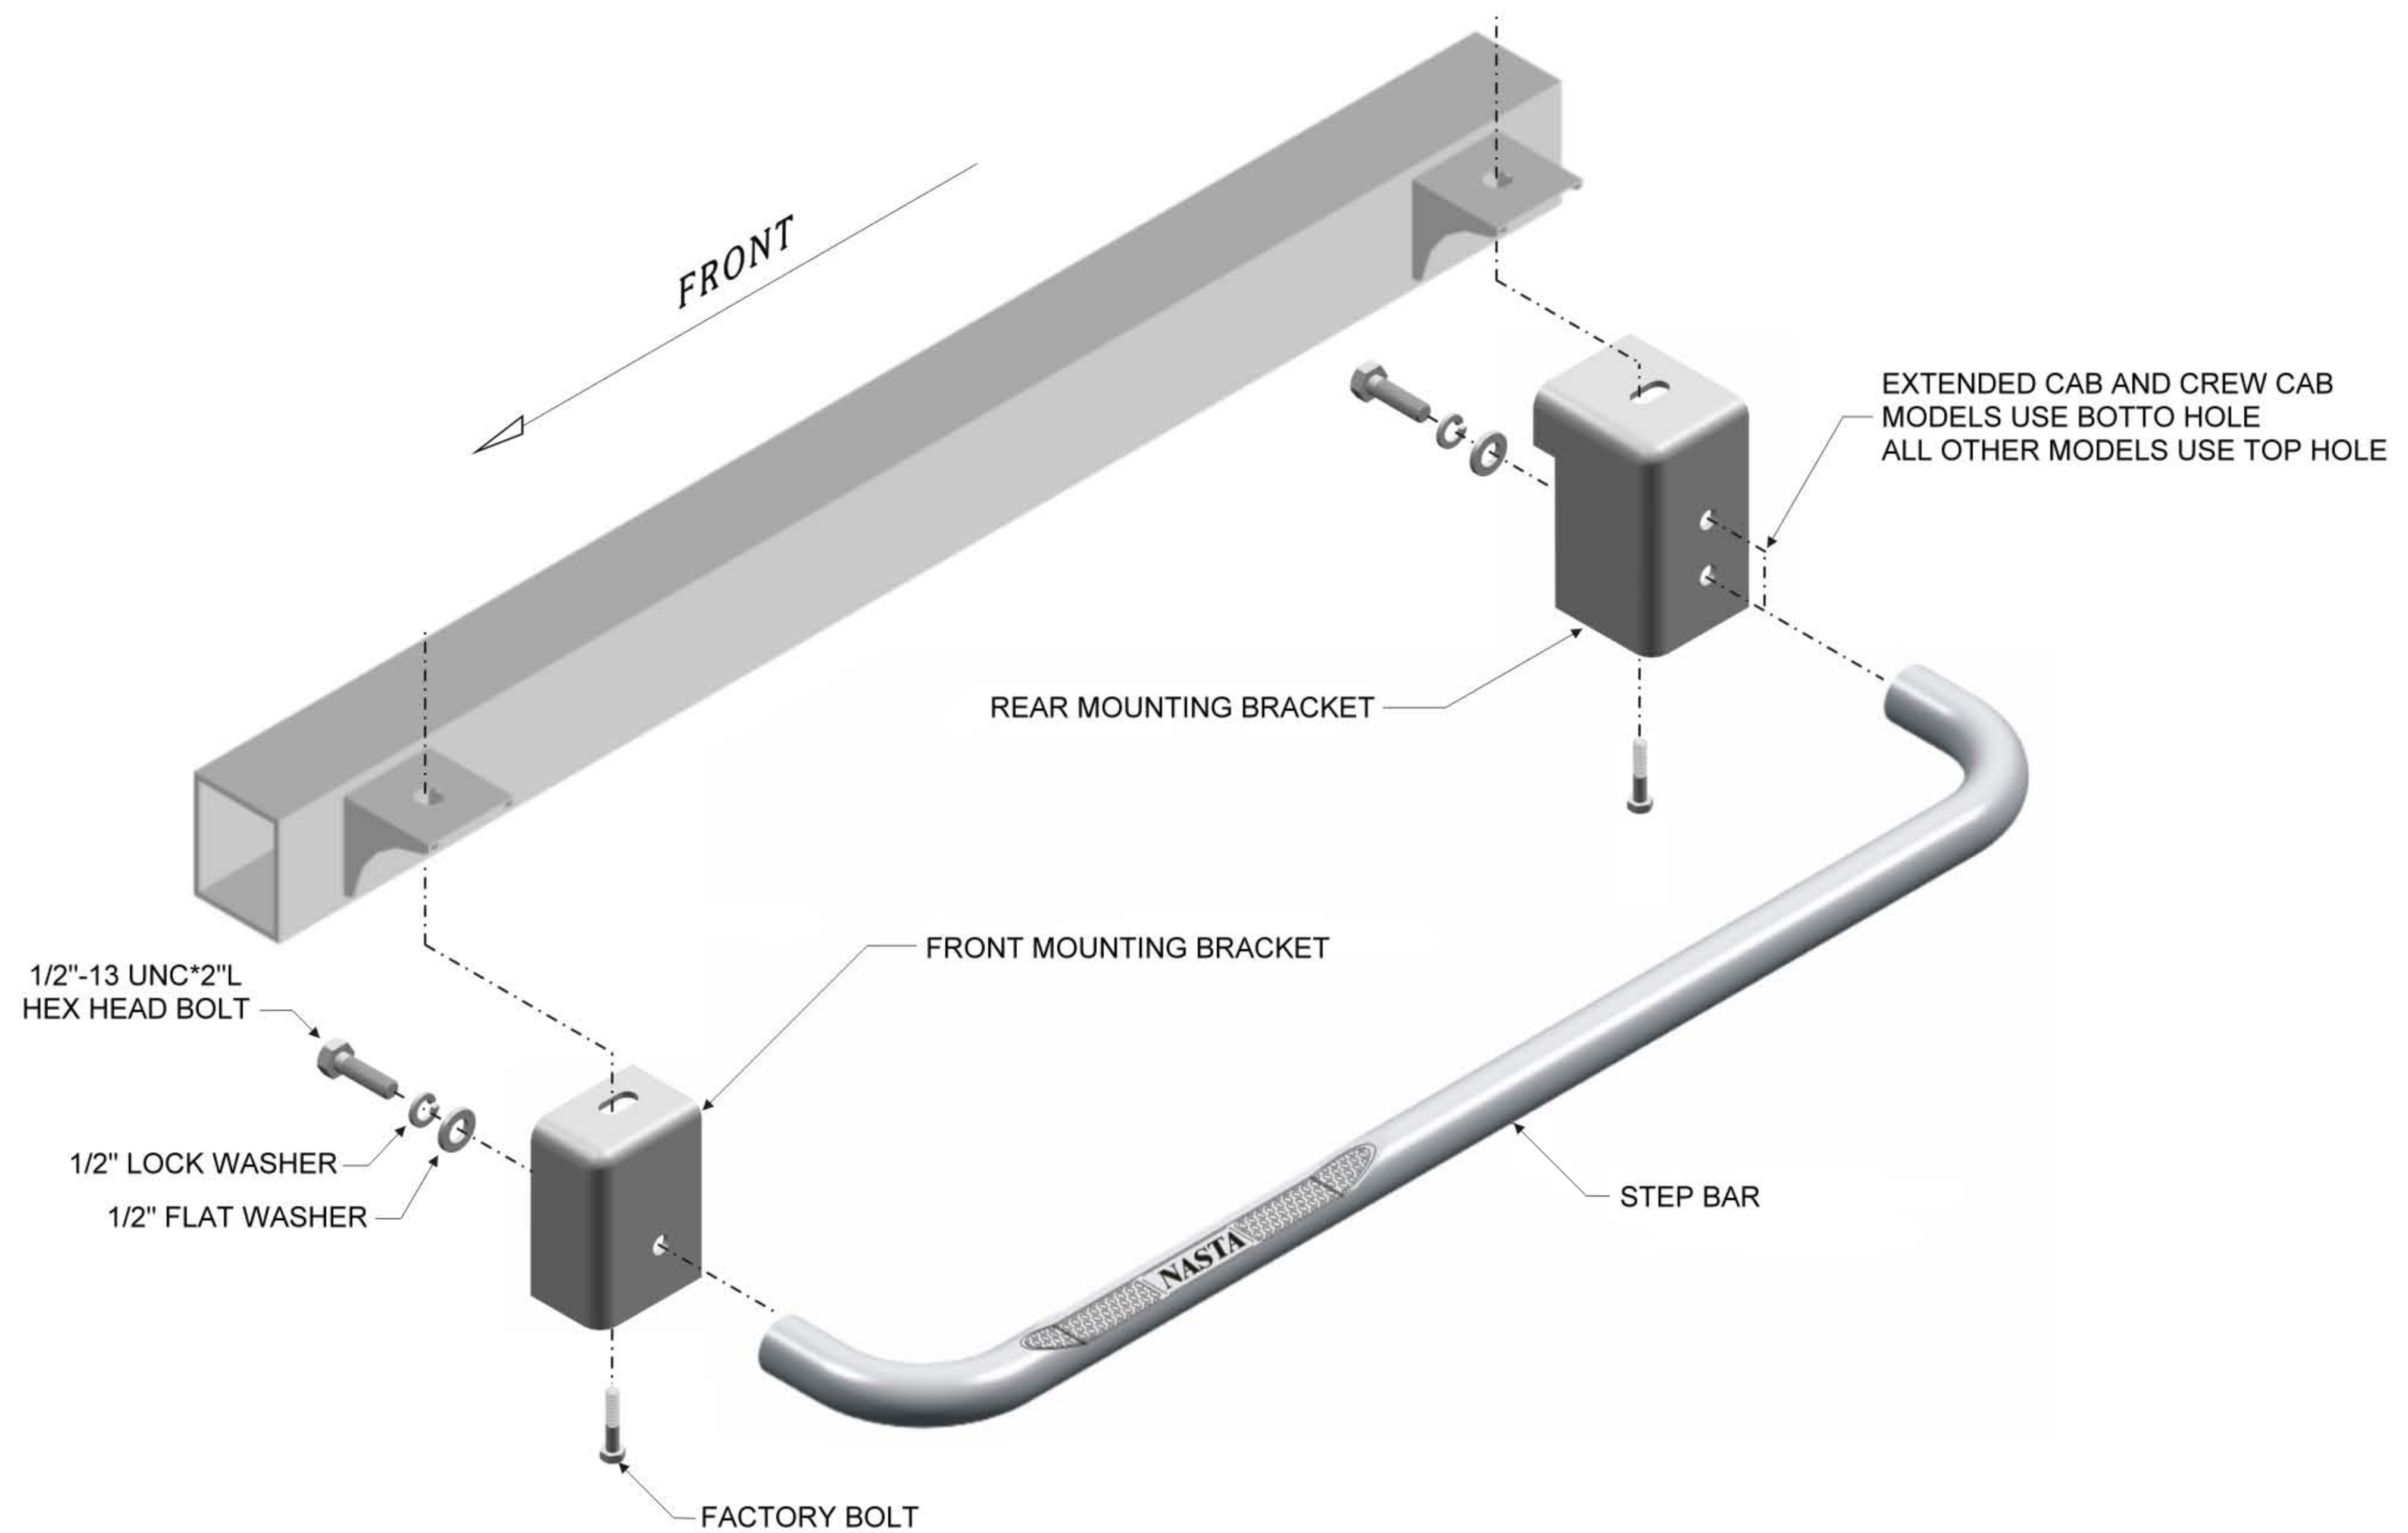


FIGURE 1

ASSEMBLY AND INSTALLATION VIEW OF DRIVER SIDE- PASSENGER SIDE OPPOSITE

NASTA[®]

NASTA INTERNATIONAL, INC.
Div. of **TA CHEN** INT'L CORP.

5 Boswell Bristol, TN 37620 U.S.A

TEL:(423)764-0700.FAX(423)764-7849.Toll Free(877)891-0816

www.nastainternational.com