

PART# 76-1065B



TOOLS NEEDED

19mm SOCKET
3/4" WRENCH
3/4" SOCKET
RATCHET
18mm SOCKET
9/16" SOCKET

QTY	DESCRIPTION
2	STEP BARS (1 DRIVER SIDE; 1 PASSENGER SIDE)
2	MOUNTING BRACKETS FRONT (1 DRIVER SIDE; 1 PASSENGER SIDE)
2	MOUNTING BRACKETS REAR (1 DRIVER SIDE; 1 PASSENGER SIDE)
2	CENTER MOUNTING BRACKETS
4	1/2"-13 UNC*2"L HEX HEAD BOLT
10	1/2" FLAT WASHERS
10	1/2" LOCK WASHERS
4	1/2" SPACER WASHERS
2	M10XP1.5-25mm BUTTON HEAD CAP SCREW
2	3/8" FLAT WASHERS
2	3/8" LOCK WASHERS

STEPS	INSTALLATION
1	CHECK CONTENTS OF BOX FOR DAMAGE OR MISSING ITEMS.
2	REMOVE DRIVER SIDE BODY BOLT. INSTALL FRONT MOUNTING BRACKET USING EXISTING FACTORY BOLT, 1/2" FLAT WASHER PROVIDED, AND 1/2" LOCK WASHER PROVIDED. HAND TIGHTEN ONLY. (BE SURE TO KEEP EXISTING WASHER AND RUBBER BUSHING IN PLACE) DO THIS FOR ALL REMAINING CAB BOLTS.
3	REPEAT STEP 2 TO INSTALL CENTER AND REAR BRACKETS. (SEE FIGURE 1) WHEN INSTALLING CENTER BRACKET. PLACE TWO 1/2" SPACER WASHERS BETWEEN THE BRACKET AND EXISTING RUBBER BUSHING AND WASHER.
4	ATTACH STEP BAR TO BRACKETS USING STAINLESS 3/8" AND 1/2" FASTENERS. (SEE FIGURE) ALIGN STEP BAR WITH VEHICLE BODY. TIGHTEN AND TORQUE FASTENERS TO: M12*P1.75-120mm...65 FT/LBS ; 1/2"...65 FT/LBS ; AND 3/8"...30 FT/LBS.

PART# 76-1065B

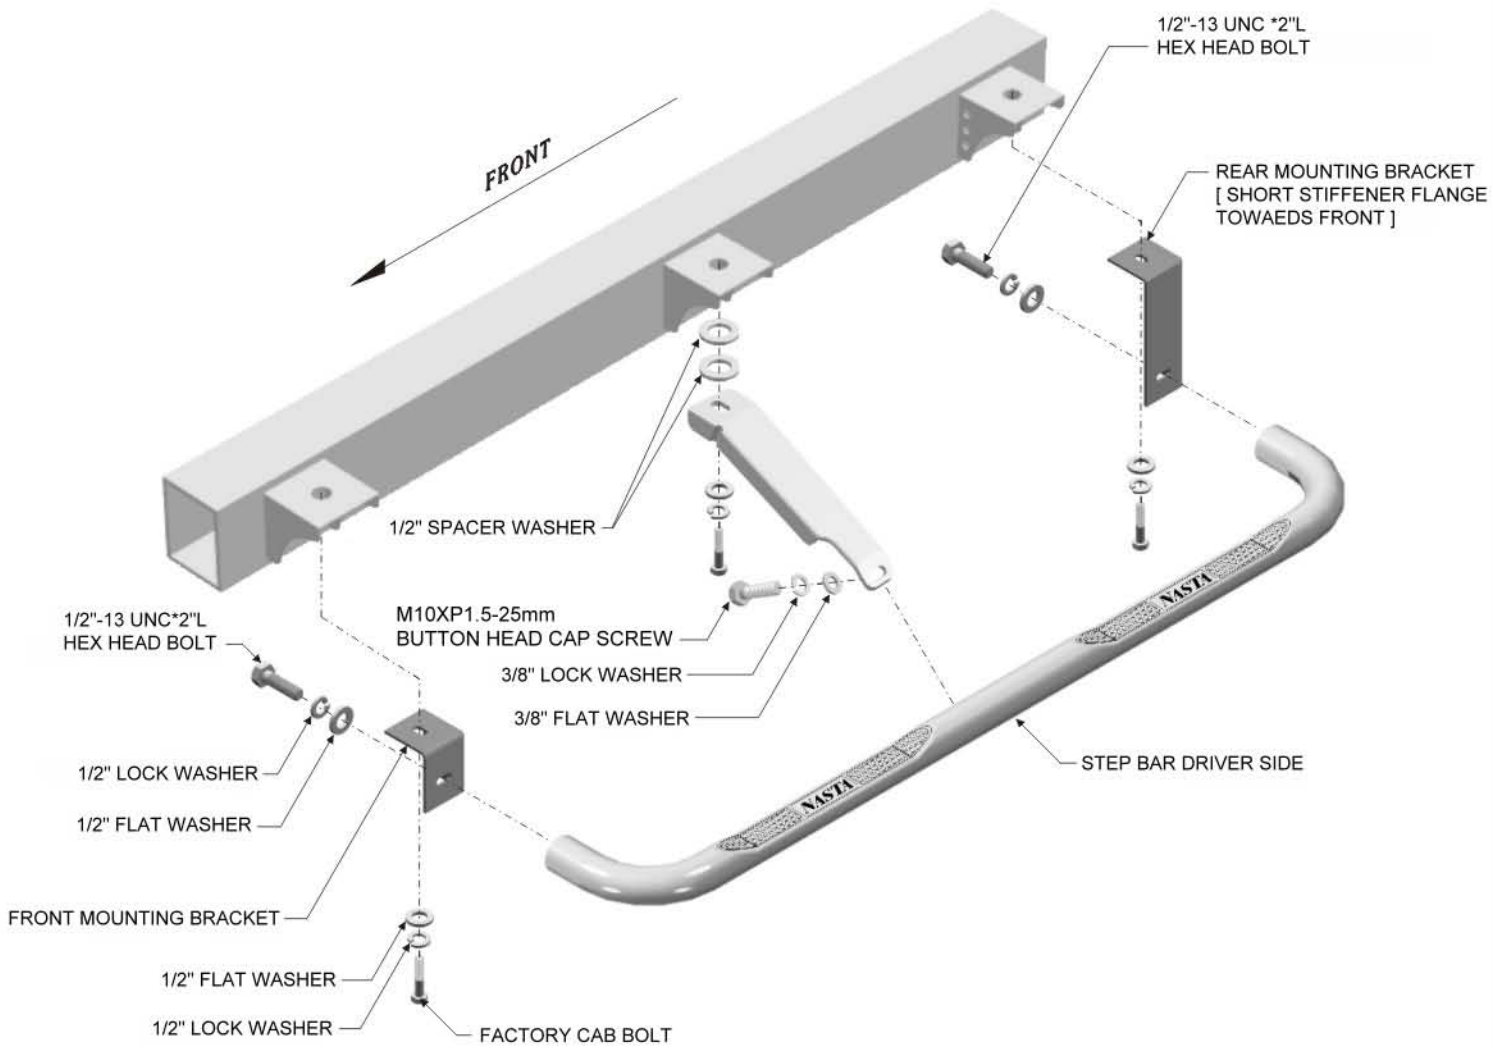


FIGURE 1
DRIVER SIDE SHOWN-PASSENGER OPPOSITE

NASTA[®]

NASTA INTERNATIONAL, INC.
Div. of **TA CHEN** INT'L CORP.
5 Boswell Bristol, TN 37620 U.S.A
TEL: (423) 764-0700. FAX (423) 764-7849. Toll Free (877) 891-0816
www.nastainternational.com